

Q-ONE LAPTOP BIOS update process

Firstly use formatted SSD (means the SSD storage space can be see in computer) to install into Q-ONE laptop. Let's leave the SSD formatting process latter.

PART 1 Formatting the U drive Process



- 1)Decompression the file APL BIOS工具.rar
- 2)Formatting the U disk and select FAT32
 - 3)Rename the U disk name to "WINPE "
 - 4)Press "Start " to formatting the U disk
 - 5)After formatting completed then copy the BIOS files into the U disk


(Please note copy the file directly to U disk ,do not create a new folder)

BIOS file like follow

文件夹	EFI	2022/5/25 19:32	文件夹	
文件	BD-BI-14.1-Y116AR150-AA55E-013-C...	2022/4/29 16:57	BIN 文件	8,192
文件	error	2022/5/25 12:45	文本文档	1
文件	fparts	2018/11/6 21:41	文本文档	15
文件	Fpt.efi	2018/11/6 21:41	EFI 文件	4,199
文件	README	2016/12/17 11:06	文件	0
文件	startup.nsh	2022/5/25 19:22	NSH 文件	1

PART 2 The process of loading BIOS

- 1) Keep laptop turn off
- 2) Plug the U disk
- 3) Press "Power on "
- 4) Keep press F7
- 5) **Select the U disk file ,when you see "Do you want to continue ?**
Please enter " y " to continue

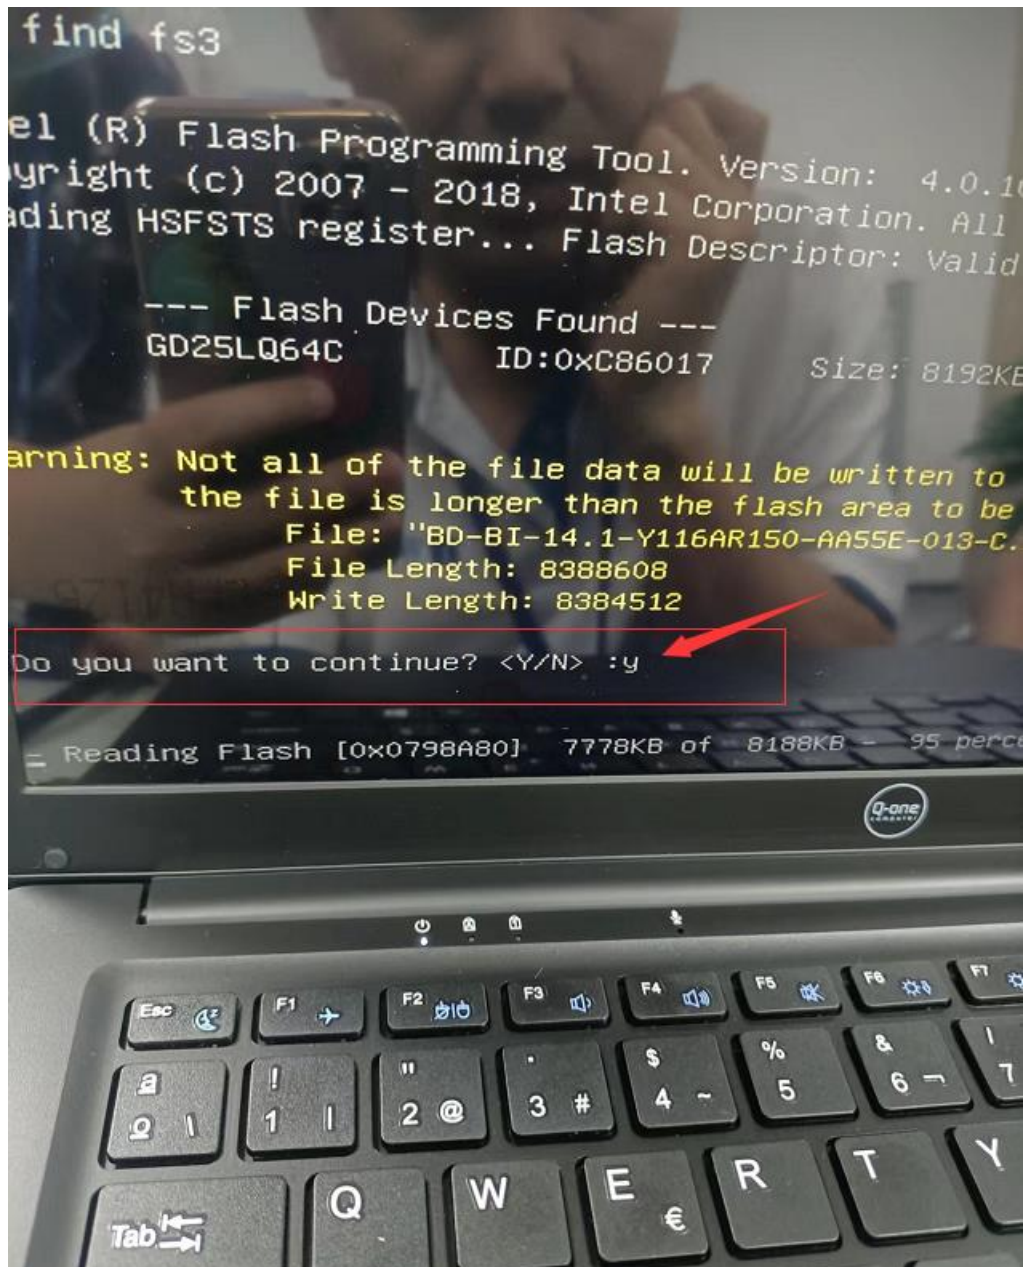


- 6) Wait the the uploading process until 100%
- 7) Remove the U disk

PART 3 Check the BIOS updated or not

1. Keep laptop turn off
2. Turn on power
3. Keep press ESC when power on light turn on


This is new BIOS version .

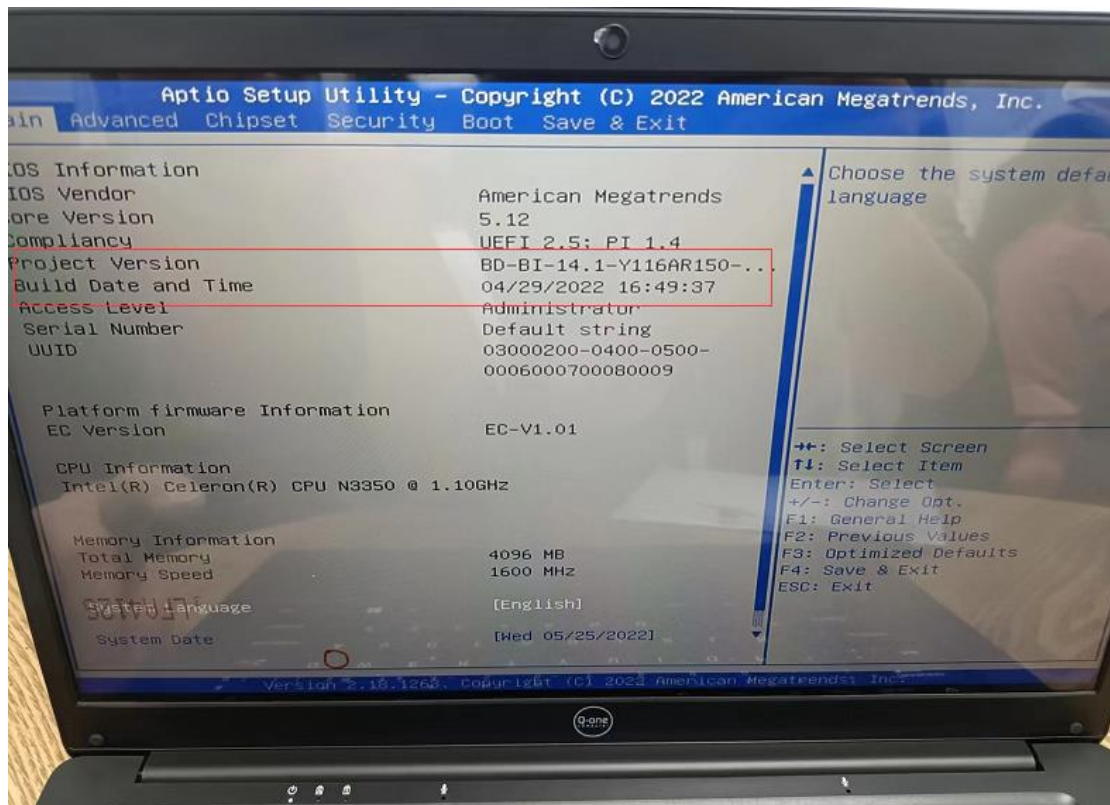


Keep press turn off button to go back ,then turn on the laptop .

PART 4 Check the windows ID active or not


A. Open this icon

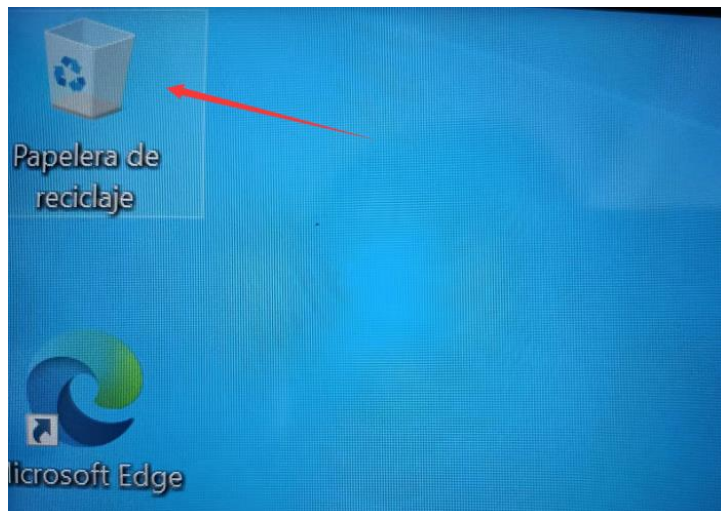


B. Open this icon

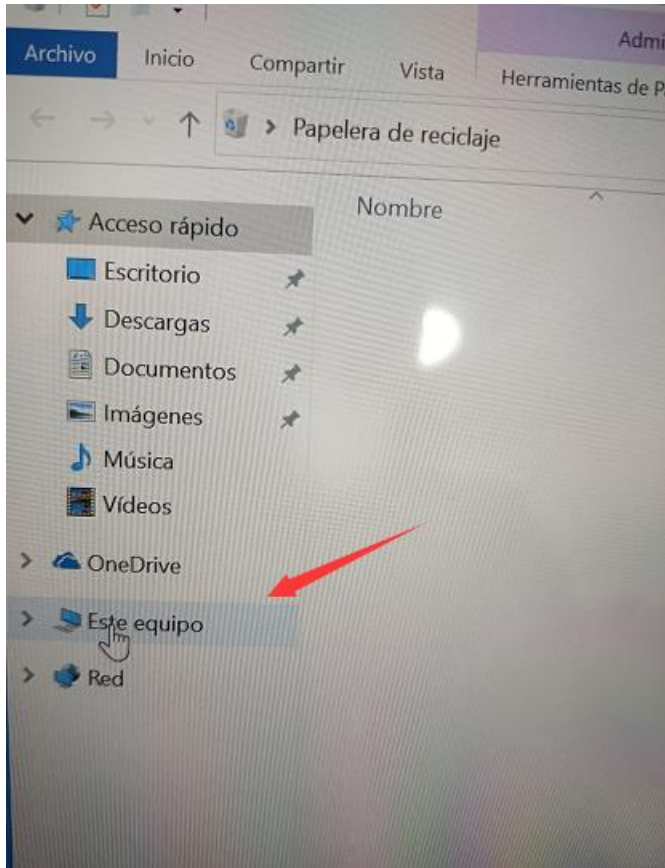


C. Then press mouse right button in "empty space "

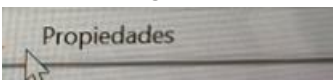D. Select 

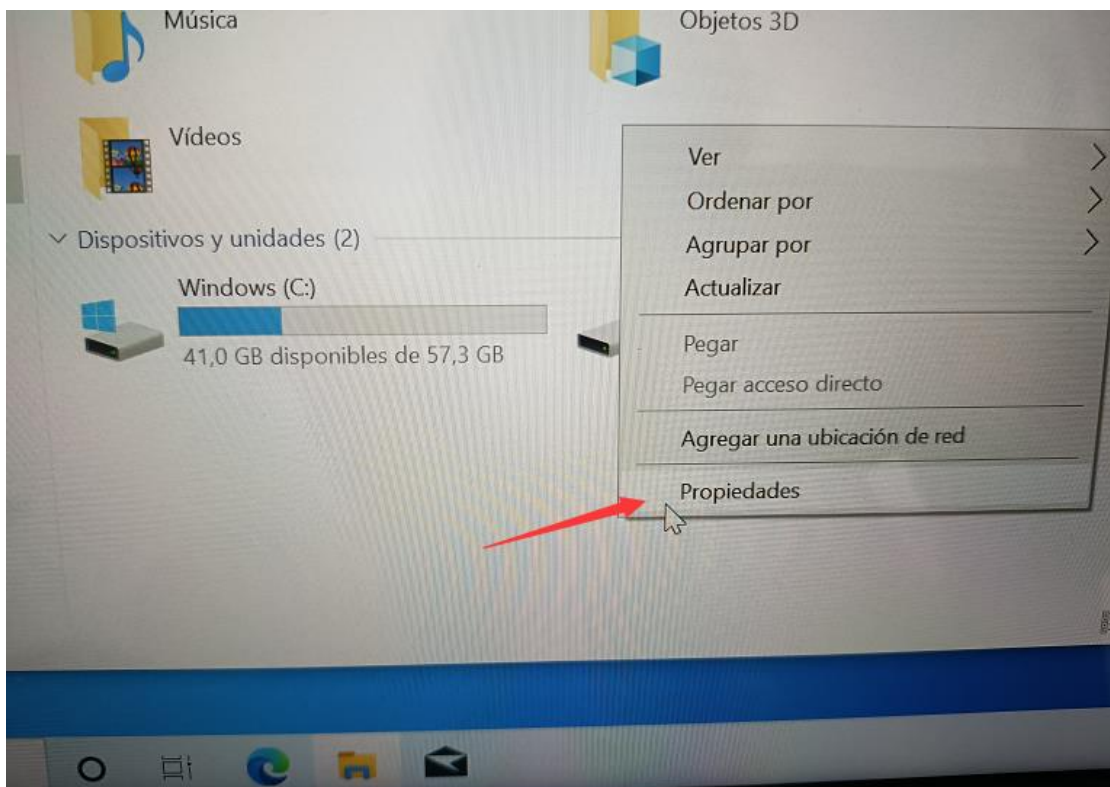

E. Windows ID show like this

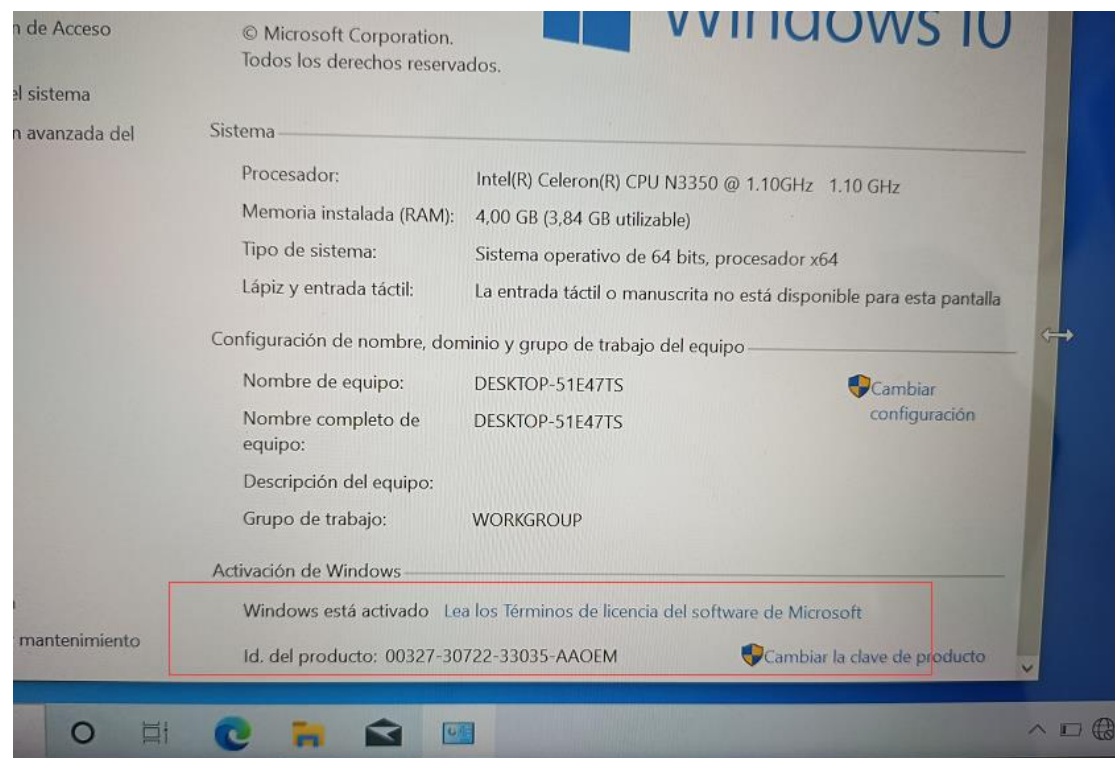

After above steps finished ,going to testing WIFI connection .